THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF STELLAR INDUSTRIES INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF STELLAR INDUSTRIES INC. IS PROHIBITED.

ITEM	PART	DESCRIPTION	QTY.
1	30747	MNT FLAT FRNT XTRALIFT 8FT F-250 MM	2
2	24734PC	HOOK SUBFRAME 24734 POWDERCOAT	2
3	30988	FLAT REAR XTRA LIFT MID MOUNT	1
4	30919	CAP SCR 14MMX140MM HHGR5	2
5	30920	CAP SCR 14MMX180MM HHGR5	2
6	0504	CAP SCR 0.50-13X3.00 HHGR5	1
7	0352	WASHER 0.50 USS FLAT ZINC	12
8	C6106	NUT 0.50-13 HHGR5 NYLOC	5
9	31027	CAP SCR 0.50-13X8.00 HHGR5	2
10	C1002	CAP SCR 0.50-13X6.00 HHGR5	2

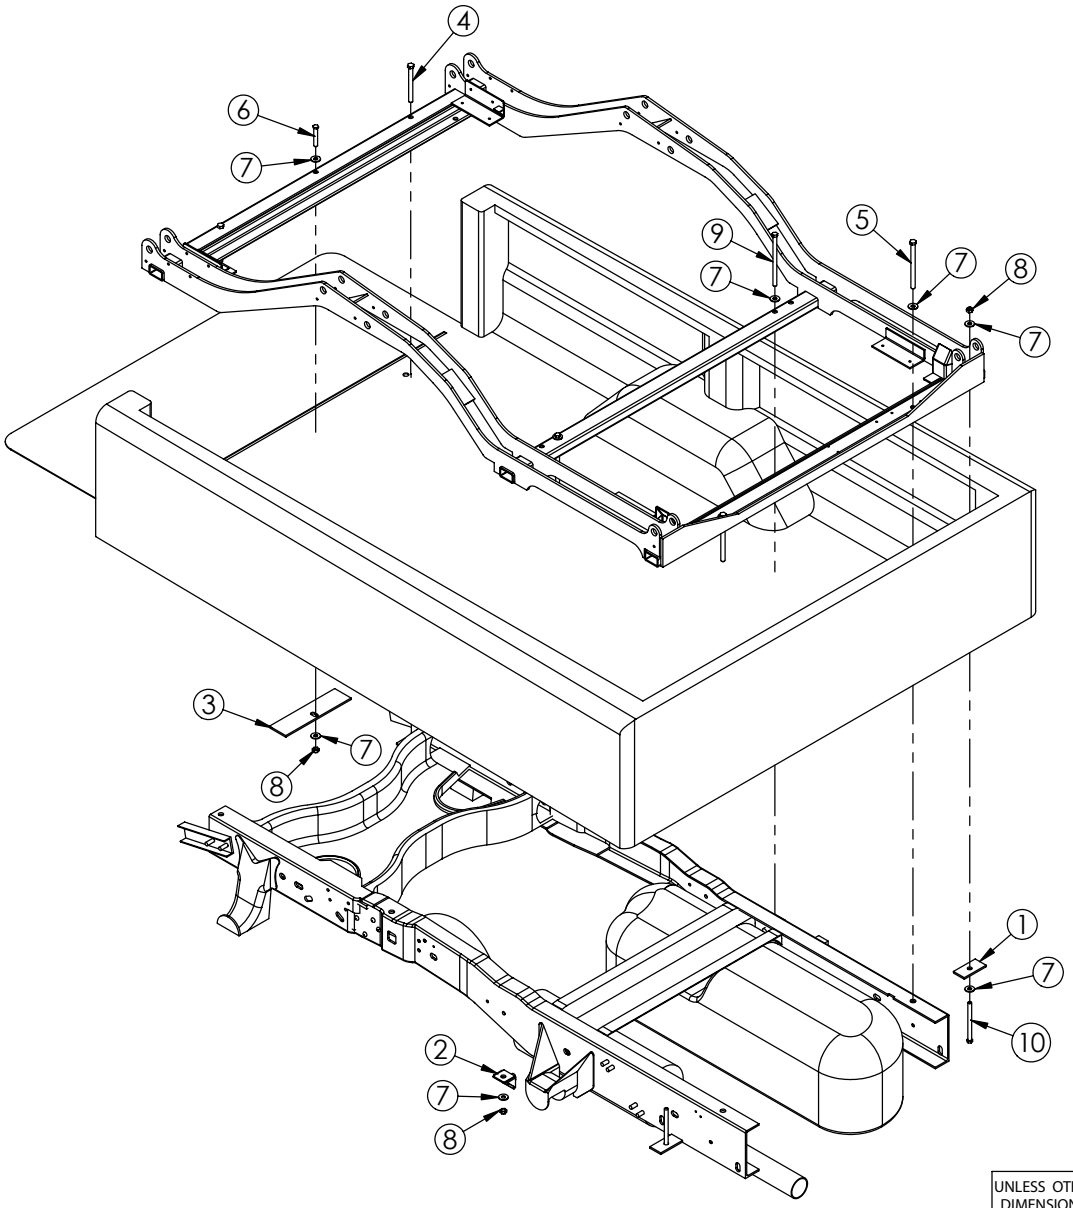

INSTALLATION INSTRUCTIONS

1) REMOVE FRONT AND REAR TRUCK BOX BOLTS.
2) PLACE XTRA LIFT INTO TRUCK BOX.
3) LOCATE XTRA LIFT USING FRONT AND REAR BOX MOUNT HOLES. AFTER MAKING SURE XTRA LIFT IS SQUARE IN TRUCK BOX, FASTEN DOWN WITH HARDWARE SHOWN.
5) DRILL DOWN THRU MIDDLE MOUTING HOLES.
6) TIGHTEN DOWN MIDD LE MOUNT WITH HARDWARE SHOWN
7) FOR FRONT OUTSIDE MOUNT MEASURE 9.19" FROM FRAME. HOLES SHOULD BE CENTERED ON TRUCK BOX FRONT CROSS MEMBER.
8) ATTACH FRONT MOUNT WITH HARDWARE SHOWN.
9) TIGHTEN DOWN ALL BOLTS AND MAKE SURE HARDWARE IS NOT LOOSE.

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES
TOLERANCES ARE:
TWO DECIMAL PLACES: + OR - .03
THREE DECIMAL PLACES: + OR - .005

DO NOT SCALE DRAWING

CAD GENERATED DRAWING, DO NOT MANUALLY UPDATE

MATERIAL		
WEIGHT	MAT'L #	
DRAWN	SAB	DATE 05/07/04
CHECKED	--	--
MFG ENG	--	--

Starship Custom Vehicles
office (574) 293-1775
cell (574) 596-5331
sales@startracks.org
4315 Wyland Drive
Elkhart, IN 46516-9501

MTG KIT XTRA LIFT 8FT F-250 MM

SIZE A | DWG. NO. 30746 | REV.

SCALE 1:25 | CAD FILE: 30746 | SHEET 1 OF 1

REV	DESCRIPTION	DATE	BY

REV	DESCRIPTION	DATE	BY